

STEALTH BLINKER BUDS

SUPER-EASY INSTALLATION INSTRUCTIONS


As with all r1100sgoodies products, you never have to alter your bike so that you can easily bring it back to stock.

Tools required: Medium Phillips screwdriver,
2.5mm allen wrench, electrician tape.

REMOVE THE STOCK UNITS

Your stock turn signals are held on by one screw (a), just forward of the unit. Save the screw, as you will use it to mount the SBBs.

- 1) Remove the screw on the back of the stock unit that secures the plastic lens. (b)
- 2) Pop out the mirrored bulb unit.
- 3) Remove the slide connectors from the bulb unit
- 4) Carefully pull the wires from the stock unit
- 5) Do the same for the other side

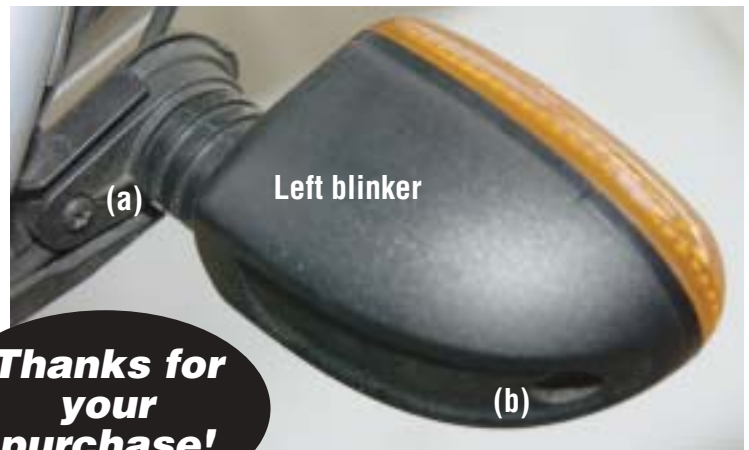


Thanks for your purchase!

INSTALL THE SBBs

The SBBs are not side sensitive, however, make sure that the little notch on the LED housing is pointed down.

- 1) The base is machined to perfectly fit the stock hanger. Slip the wires through the rectangular hole and press in the rectangular peg on the base of the Blinker Bud into the same rectangular hole making sure that the wires do not pinch or bind. Keep the wires as flat as possible against the notch in the rectangular peg.
- 2) Use the existing screw that held on the stock unit and put it through the SBB into the hanger (a) in above photo}
- 3) Install and slightly tighten the supplied allen bolt and half nylon washer to the threaded hole in the post making sure that the cut side of the nylon washer is situated as to not cut into the wire. See below illustration.
- 5) With pliers, **carefully and slightly** decrease the gap of the stock female connectors. This insures a better fit when you connect the SBB connectors. You can do this with the connectors together.
- 6) Attach the male slide connectors of the SBB into the BMW female connectors (**red wire to BMW blue and black wire to BMW brown**). Make sure that the connectors are not touching each other and turn on ignition and check turn signals and emergency blinker.
- 7) If all is working correctly, wrap each connector with electrician's tape.
- 8) Pull the wire snugly against the backside of the hanger and secure with the supplied wire ties. Trim the ties. Any excess wire can be pulled up under the seat.

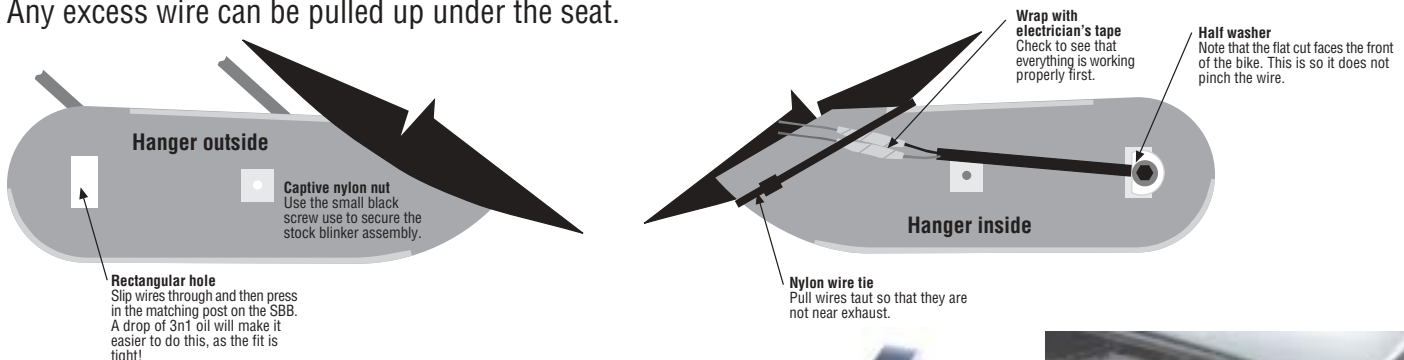

Ride safe and keep the rubber side down!
Still can't figure it out? Call us M-F 8:30am-5:30pm, MST and we will be glad to help! (719) 473-2030.
Or, email us: r1100sgoodies@gmail.com.