


# r1100sgoodies.com

## STEALTH LICENSE PLATE BRACKET WITH LED LIGHT

1. Remove the stock license plate holder/fender. You will have to remove the license plate, bracket, light unit, in order to get to the allen head screws (3) that hold it on to the bracket welded to the exhaust cans. Disconnect the wires.
2. Keep all the hardware. You'll have to use it on the STEALTH bracket.
3. Remove the rubber grommets from the plastic stock piece. You will have to extract the 'top hat' washers that are pressed into the grommet in order to get it out of the plastic piece.
4. Plug in the 2 connectors into the BMW harness. We suggest that you wrap electrical tape around the connection to secure it. Make sure wires stay in boxed area of STEALTH bracket
5. Follow the diagram to mount the STEALTH bracket:

**Thanks for your purchase!**

**Recently I discovered that BMW is using different types of connectors, so I am including all the ones that I have heard about!**

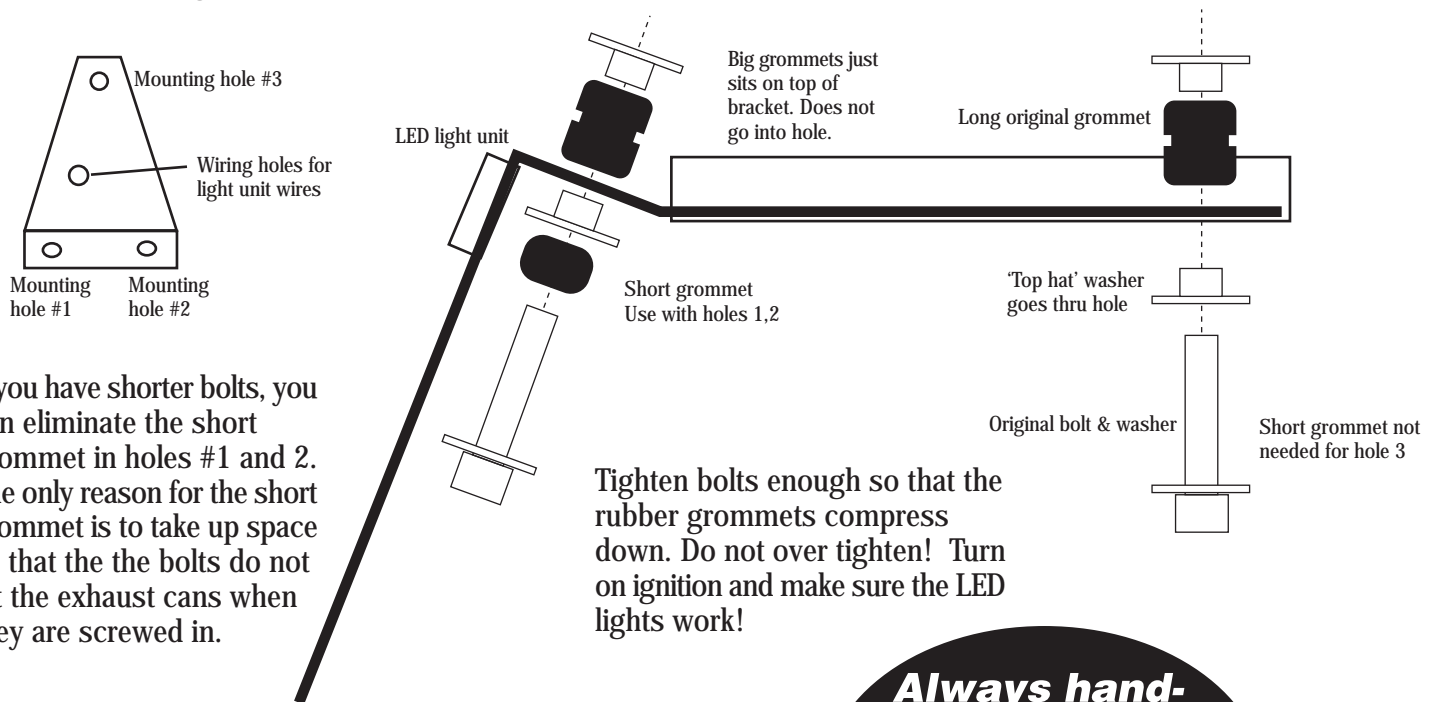

If you have shorter bolts, you can eliminate the short grommet in holes #1 and 2. The only reason for the short grommet is to take up space so that the the bolts do not hit the exhaust cans when they are screwed in.

Ride safe and keep the rubber side down!

**Always hand-tighten all bolts first to insure that they are threading in properly!**

**NEW!  
Powder coated finish!**

Still can't figure it out? Call us M-F 8:30am-5:30pm, MST and we will be glad to help! (719) 473-2030 Or, email us: r1100sgoodies@gmail.com.


# r1100sgoodies.com

## XTRASTEALTH LICENSE PLATE BRACKET WITH LED LIGHT

1. Remove the stock license plate holder/fender. You will have to remove the license plate, bracket, light unit, in order to get to the allen head screws (3) that hold it on to the bracket welded to the exhaust cans. Disconnect the wires.
2. Keep all the hardware. You'll have to use it on the XTRASTEALTH bracket.
3. Remove the rubber grommets from the plastic stock piece. You will have to extract the 'top hat' washers that are pressed into the grommet in order to get it out of the plastic piece.
4. Plug in the 2 connectors into the BMW harness. We suggest that you wrap electrical tape around the connection to secure it. Turn on ignition and test light. You may have to switch the polarity. Make sure wires stay in boxed area of XTRASTEALTH bracket.
5. Follow the diagram to mount the XTRASTEALTH bracket:

**Thanks for your purchase!**

**Recently I discovered that BMW is using different types of connectors, so I am including all the ones that I have heard about!**

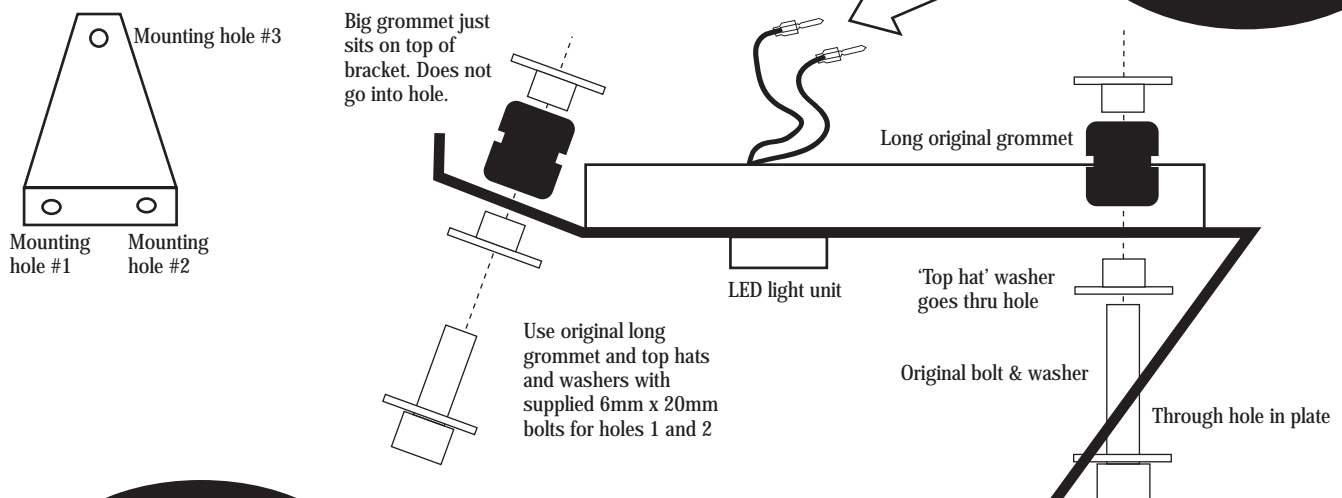

**NEW!  
Powder  
coated finish!**

Tighten bolts enough so that the rubber grommets compress down.  
Turn on ignition and make sure the LED lights work!

*Warning: Do not open up this angle, as it could cause the edge of the plate to grab the tire with extreme shock compression*

**Ride safe and keep the rubber side down!**

Still can't figure it out? Call us M-F 8:30am-5:30pm, MST and we will be glad to help! (719) 473-2030  
Or, email us: r1100sgoodies@gmail.com.

**Always hand-tighten all bolts first to insure that they are threading in properly!**